




NIMBUS

a personal dashboard for your digital life

OVERVIEW

Part of the Quirky + GE collection of smart products, Nimbus is a highly customizable 4-dial display that tracks what's important to you in real time. Personalize each gauge using your mobile device to monitor an array of information, like time, traffic, weather, email, your calendar, social media activity, and more. It even works with FitBit and other products in the Quirky + GE collection.

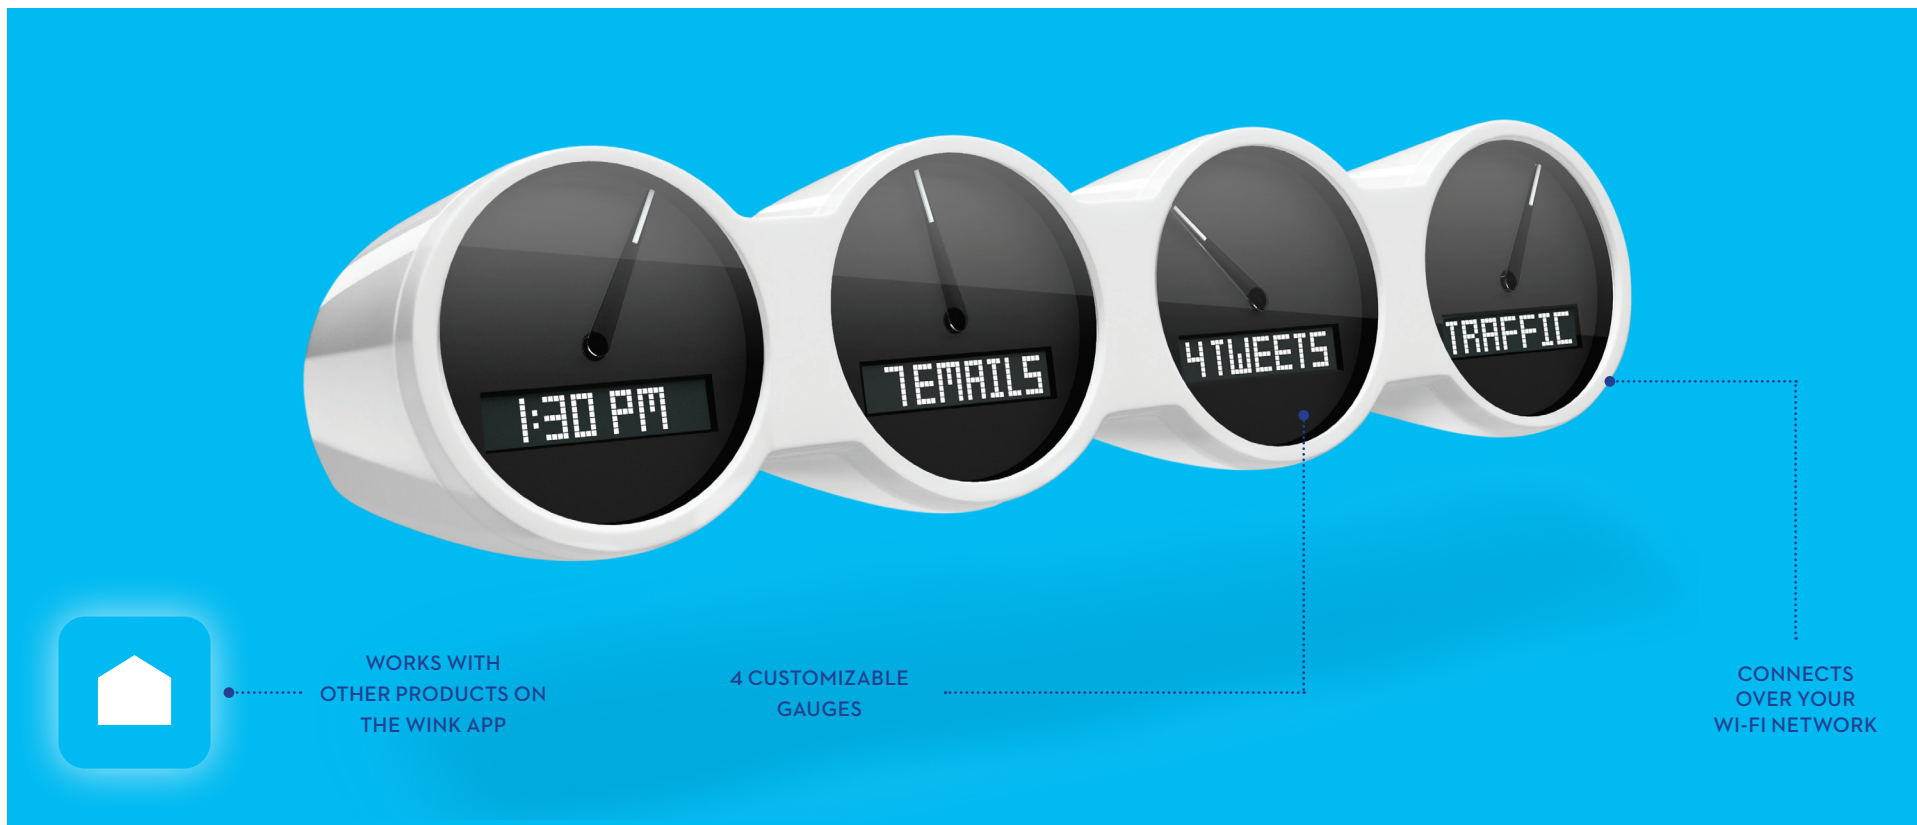

FEATURES

- 1 Has 4 customizable gauges that track what's important to you
- 2 Works with other products on the Wink app
- 3 Instantly connects to your mobile device over your Wi-Fi® network

WHAT'S INCLUDED (in the box)

- 1 Nimbus
- 2 AC adapter
- 3 Quick Start Card

REQUIRED FOR USE (not in the box)

- 1 Wi-Fi®
- 2 Mobile device with internet access
- 3 Wink app





GETTING STARTED

- 1 Download and install the Wink app on your mobile device as outlined in the Quick Start Card. The app will enable a Wi-Fi® connection between your mobile device and Nimbus.
 - 2 Turn Nimbus ON by plugging it in, using the included AC adapter.
 - 3 Open the Wink app. Follow the app's instructions to connect to your Nimbus and to set up the information you would like each of its four dials to display.
- Your mobile device connects by sending light pulses into a sensor on your Nimbus. It is best to do this in a dimly lit environment.

USING NIMBUS

- 1 Place the Nimbus on a flat hard surface
- 2 To snooze, tap the clock once.
- 3 To turn alarm clock off, tap twice.
- 4 Use the Wink app to set and change alarm preferences at any time.
- 5 Additional features and capabilities can be found on the Wink app.

TROUBLESHOOTING

If Wi-Fi® is not connected, any scheduled alarms may not execute depending on the outage time. Re-connect the Wi-Fi® network.

If you do not get push notifications on your mobile device from the Wink app as you have specified in the app, please check that notifications are turned on for Wink app in your mobile device's notification settings.

PRECAUTIONS, CARE & MAINTENANCE

DO NOT submerge Nimbus in water.

DO NOT wash Nimbus in a dishwasher.

DO NOT expose Nimbus to heat sources.

Use care to avoid dropping Nimbus or subjecting it to severe impact, which could damage the product.

Clean product with a damp, soft cloth.

Always use the adapter included with the unit. The use of adapters not authorized by the manufacturers can damage the product and increase risk of shock and fire.

QUESTIONS?

For service and support or tutorials, visit <http://www.quirky.com/wink/nimbus/faq>, email us at questions@quirky.com or call 1-866-5QUIRKY.

IMPORTANT SAFETY INSTRUCTIONS/WARNINGS



CAUTION

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

To completely disconnect this product from power, disconnect the adapter plug from the wall outlet. The adapter plug is used to completely disconnect the power supply to the unit and must be within easy access to the user.

CAUTION

To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

CAUTION

Wink devices connect by receiving flashing light patterns that come from your phone's screen. Please note that a very small percentage of individuals may experience epileptic seizures when exposed to such light patterns or flashing lights. If you have an epileptic condition, consult your physician prior to using this app to connect a device.

IMPORTANT SAFETY INSTRUCTIONS

- 1 **Read Instructions**—All safety and operating instructions should be read before operating the device.
- 2 **Heed Warnings**—All warnings on the device and in the operating instructions should be adhered to.
- 3 **Follow Instructions**—All operating and safety instructions should be followed.
- 4 **Water & Moisture**—DO NOT submerge in water or place in a dishwasher, as it will cause damage to the internal electrical components. The device should never be used in, on or near water for risk of electric shock.
- 5 **Ventilation**—The device should always be located in such a way that it maintains proper ventilation, including in the refrigerator.
- 6 **Heat**—Never locate the device near heat sources such as radiators, floor registers, stoves or other heat-generating devices.
- 7 **Cleaning**—The device should be cleaned in accordance with manufacturer's instructions stated in the Precautions, Care and Maintenance section.
- 8 **Periods Of Non-Use**—Unplug adapter from outlet.
- 9 **Dangerous Entry**—Care should be taken that no foreign objects or liquids fall or are spilled on or inside the device.
- 10 **Damage Requiring Service**—The device should be serviced by licensed technicians when:
 - The internal electronic components have been damaged.
 - Objects have fallen or liquid spilled inside of the device.
 - The device has been exposed to moisture.
 - The device does not appear to be operating properly or exhibits a marked change in performance.

- The device has been dropped or becomes damaged.

- 11 **Service**—The device should always be serviced by licensed technicians. Only replacement parts specified by the manufacturer should be used. The use of unauthorized substitutions may result in fire, shock, or other hazards.

A NOTE ABOUT RECYCLING:

This product and its packaging materials are recyclable. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. This product and the supplied accessories constitute the applicable product according to the WEEE directive.

MODIFICATIONS DISCLAIMER

WARNING!!!

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

IC WARNING

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class (*) digital apparatus complies with Canadian ICES-003

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Quirky could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF EXPOSURE STATEMENT

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum 20cm distance between the device and your body. Use only the supplied antenna.

QUIRKY ORIGINAL PURCHASE PRODUCT WARRANTY

Quirky, Inc. ("Quirky") warrants to the original purchaser ("Purchaser") of this Quirky product, for the period of one (1) year following the date on which Purchaser purchases the product, that the product shall be free of defects in design, assembly, material, or workmanship.

Quirky will repair or replace, at its option, any defective product free of charge.

In order to qualify for this warranty, the Purchaser must provide the defective product and a copy of the original receipt of purchase, to Quirky for inspection. The receipt of purchase must indicate the product purchased, price paid, date of purchase, and name of merchant.

Alternatively, at the Purchaser's election, but subject to Quirky's approval, the Purchaser may obtain replacement parts from Quirky, free of charge. To obtain replacements parts, the Purchaser must provide the product serial number to Quirky in connection with any request for replacement parts.

To request service under this warranty, contact Quirky at 866-5-QUIRKY or questions@quirky.com, and a Quirky representative will provide instruction on how to proceed.

This warranty shall be null and void if Quirky determines that the product has been improperly installed, altered or tampered with any way.

This warranty does not protect against normal-use wear and tear or damage due to abuse.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF QUIRKY. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL QUIRKY BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY QUIRKY PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some jurisdictions do not allow exclusions or limitations on implied warranties or incidental, consequential or other damages, so the above exclusions and limitations may not apply to you.

COPYRIGHT NOTICE

Copyright 2013 Quirky Incorporated

No part of this manual may be reproduced or modified without written consent from Quirky Incorporated.

Quirky Incorporated is not liable or responsible for any operational, or technical errors or omissions made in this manual.

Quirky and Nimbus are registered trademarks of Quirky Incorporated.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance.

HOW TO OBTAIN SERVICE

Need help? We are available
Weekdays 9AM - 9PM EST
Weekends 12PM - 6PM EST

Email questions@quirky.com

Call 1-866-5QUIRKY






NIMBUS

le tableau de bord personnel de
votre existence numérique

PRÉSENTATION

Faisant partie de la gamme de produits intelligents Quirky + GE, Nimbus est un tableau de bord à 4 touches personnalisables qui assure le suivi en temps réel des choses les plus importantes pour vous. Personnalisez chaque indicateur à l'aide de votre appareil mobile afin de garder un œil sur de nombreuses données, comme la météo, le trafic, vos e-mails, votre calendrier, les réseaux sociaux, etc. Il est même compatible avec FitBit et d'autres produits de la gamme Quirky + GE.

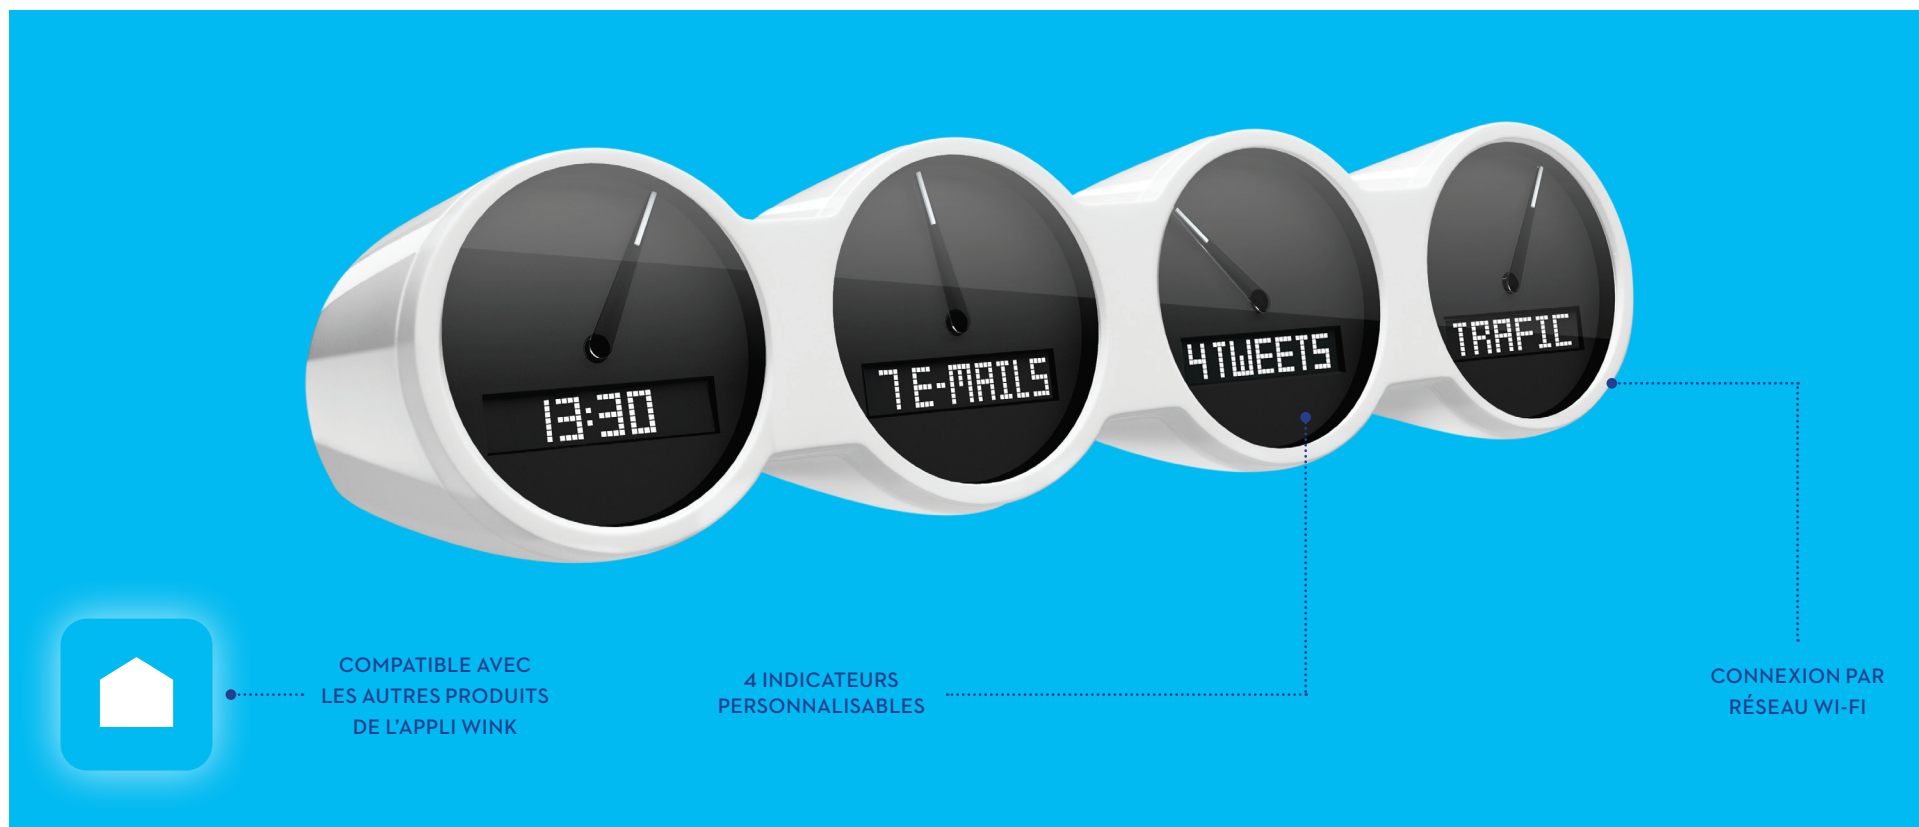

CARACTÉRISTIQUES

- 1 Il contient 4 indicateurs personnalisables qui vous permettent de suivre les données qui vous intéressent.
- 2 Compatible avec les autres produits de l'appli Wink.
- 3 Se connecte instantanément à votre appareil mobile sur votre réseau Wi-Fi®.

INCLUS (dans la boîte)

- 1 Nimbus
- 2 Adaptateur secteur (6.5V, 0,9A)
- 3 Carte de démarrage rapide

MATERIEL REQUIS (non fourni)

- 1 Wi-Fi®
- 2 Appareil mobile avec accès à Internet
- 3 Wink app



DÉMARRAGE

- 1 Téléchargez et installez l'appli Wink sur votre appareil mobile selon les indications de la carte de démarrage rapide. L'appli permettra la liaison Wi-Fi® entre votre appareil mobile et Nimbus.
- 2 Nimbus s'allume dès qu'il est branché à l'aide de l'adaptateur secteur.
- 3 Lancez l'appli Wink. Suivez les consignes de l'appli pour connecter votre Nimbus et configurer les données que vous souhaitez afficher pour chacun des quatre boutons de l'écran.

Votre appareil mobile se connecte en envoyant des impulsions lumineuses au capteur de votre Nimbus. Il est préférable de procéder dans un espace peu éclairé.

UTILISATION DE NIMBUS

- 1 Placez Nimbus sur une surface plane et rigide.
- 2 Pour mettre sous silence, tapez une fois sur l'horloge.
- 3 Pour couper le réveil, tapez deux fois.
- 4 Utilisez l'appli Wink pour définir et modifier les préférences d'alarme à tout moment.
- 5 D'autres fonctions et paramètres sont disponibles dans l'appli Wink.

DÉPANNAGE

En cas de perte de la liaison Wi-Fi®, les programmeurs pourraient ne pas fonctionner (en fonction de l'heure de la panne). Réactivez le réseau Wi-Fi®.

Si l'appli Wink ne vous envoie pas de notifications push malgré les paramètres définis dans l'application, vérifiez si les notifications sont bien actives pour Wink dans les réglages de votre appareil mobile.

PRECAUTIONS, NETTOYAGE ET ENTRETIEN

NE PAS plonger Nimbus dans l'eau.

NE PAS laver Nimbus en machine.

N'EXPOSEZ PAS Nimbus à des sources de chaleur.

Prenez soin de Nimbus pour éviter de le faire tomber ou de lui faire subir des chocs violents, car cela pourrait endommager le produit.

Nettoyez le produit avec un chiffon doux humide.

Utilisez toujours l'adaptateur fourni. L'utilisation d'adaptateurs non validés par le fabricant pourrait endommager le produit et augmenter le risque d'incendie ou d'électrocution.

QUESTIONS ?

Pour obtenir de l'aide et accéder aux tutoriels, consultez <http://www.quirky.com/wink/nimbus/faq> ou envoyez un e-mail à questions@france.quirky.com. Vous pouvez aussi appeler le 1-866-5QUIRKY (Etats-Unis).

CONSIGNES DE SÉCURITÉ IMPORTANTES/AVERTISSEMENTS



ATTENTION

Ne retirez pas le capot (ou le dos) pour éviter tout risque d'électrocution. Les pièces internes ne peuvent pas être remplacées par l'utilisateur. Confiez l'entretien à un technicien qualifié.

ATTENTION

Pour limiter les risques d'incendie et d'électrocution, n'exposez pas le matériel à la pluie ou à l'humidité.

ATTENTION

Pour débrancher complètement l'appareil, enlevez la fiche de la prise murale et enlevez les piles. La fiche permet de débrancher complètement l'appareil. Elle doit donc être

accessible à l'utilisateur.

ATTENTION

Pour réduire le risque d'électrocution, n'effectuez aucune opération d'entretien hormis celles figurant dans le manuel à moins de disposer des compétences nécessaires.

ATTENTION

Les appareils Wink se connectent à l'aide des signaux lumineux transmis par l'écran de votre téléphone. De rares personnes peuvent faire l'objet de crises d'épilepsie en cas d'exposition à ces signaux ou clignotements lumineux. Si vous êtes épileptique, consultez votre médecin avant d'utiliser l'application pour établir la connexion.

CONSIGNES DE SÉCURITÉ IMPORTANTES

- 1 Lisez les consignes** – Toutes les consignes de sécurité et d'utilisation doivent être lues avant d'utiliser l'appareil.
- 2 Respectez les avertissements** – Tous les avertissements affichés sur l'appareil et dans le manuel doivent être pris en compte.
- 3 Respectez les consignes** – Toutes les consignes de sécurité et d'utilisation doivent être respectées.
- 4 Eau et humidité** – ne pas plonger dans l'eau ni laver en machine, car cela endommagerait les composants électriques internes. L'appareil ne doit jamais être utilisé dans l'eau, sur l'eau ou à proximité afin d'éviter les électrocutions.
- 5 Ventilation** – L'appareil doit toujours se trouver dans un endroit bien ventilé, même dans le réfrigérateur.
- 6 Chaleur** – Ne placez jamais l'appareil à proximité de sources de chaleur, tels les radiateurs, les

grilles de soufflage, les poêles et autres systèmes de chauffage.

- 7 Nettoyage** – L'appareil doit être nettoyé conformément aux consignes du fabricant énoncées dans la rubrique Précautions, nettoyage et entretien.
- 8 Périodes De Non-Utilisation** – Débranchez l'appareil.
- 9 Accès dangereux** – Veillez à éviter tout accès de corps étrangers ou liquides à l'intérieur ou sur l'appareil.
- 10 Dégâts nécessitant une réparation** – L'appareil doit être réparé par des techniciens qualifiés uniquement lorsque :
 - Les composants électroniques internes ont été endommagés.
 - Le matériel est tombé ou du liquide est rentré dans l'appareil.
 - L'appareil a été exposé à l'humidité.
 - L'appareil semble ne pas fonctionner correctement ou si vous constatez une baisse des performances.
 - L'appareil est tombé ou a été endommagé.
- 11 Entretien** – L'appareil doit toujours être réparé par des techniciens qualifiés. Seules les pièces de rechange stipulées par le fabricant doivent être utilisées. L'utilisation d'autres pièces peut entraîner des incendies, électrocutions ou autres risques.

REMARQUE SUR LE RECYCLAGE

Le produit et son emballage sont recyclables. Veillez à les éliminer conformément aux règlements en vigueur en matière de recyclage. Lors de la mise au rebut, respectez la législation ou les règlements locaux. Ce produit et les accessoires fournis sont couverts par la

directive WEEE.

CLAUSE DE NON-RESPONSABILITÉ EN CAS DE MODIFICATION

ATTENTION!!!

Les changements ou modifications qui n'ont pas été expressément approuvés par le fabricant risquent d'annuler la capacité de l'utilisateur à exploiter l'appareil.

Remarque : Le fabricant décline toute responsabilité en cas d'interférence radio ou TV provoquée par une modification non autorisée du matériel. De telles modifications pourraient annuler la capacité de l'utilisateur à exploiter l'appareil.

DÉCLARATION DE CONFORMITÉ UE

Quirky Inc. déclare que ce produit de communication radio est conforme aux normes en vigueur et autres clauses applicables en vertu de la Directive 1999/5/EC.

GARANTIE SUR PRODUIT D'ORIGINE QUIRKY

Quirky, Inc. (« Quirky ») offre à l'acheteur originel (« Acheteur ») de ce produit Quirky, pendant une période de (1) an à compter de la date d'achat du produit par l'Acheteur, une garantie sur le produit contre tout défaut de conception, assemblage, matériel ou fabrication.

Quirky assurera la réparation ou le remplacement du produit, à sa seule discrétion.

Pour profiter de cette garantie, l'Acheteur devra remettre le produit défectueux et une copie du ticket de caisse à Quirky pour inspection. Le reçu doit indiquer le produit acheté, le prix payé, la

date d'achat et le nom du commerçant.

Si l'Acheteur le souhaite, et sous réserve de l'accord de Quirky, l'Acheteur pourra obtenir des pièces de rechange auprès de Quirky, sans frais. Pour obtenir les pièces de rechange, l'Acheteur devra fournir le numéro de série du produit à Quirky lors de l'introduction de toute demande de pièces.

Pour une réparation dans le cadre de cette garantie, contactez Quirky au 866-5-QUIRKY ou questions@france.quirky.com. Un représentant de Quirky vous expliquera comment procéder.

Cette garantie sera nulle et non avenue si Quirky établit que le produit a été mal installé, modifié ou manipulé de quelque manière que ce soit. La garantie n'offre aucune protection contre l'usure normale du produit ou les dégâts résultant d'une utilisation abusive.

CETTE GARANTIE REPRÉSENTE LA SEULE FOURNIE PAR QUIRKY. IL N'EXISTE AUCUNE AUTRE GARANTIE EXPLICITE OU IMPLICITE, DONT LA GARANTIE OU LA CONDITION IMPLICITE DE QUALITÉ, VALEUR MARCHANDE OU ADÉQUATION À UN USAGE PARTICULIER. CES GARANTIES IMPLICITES, LE CAS ÉCHÉANT, ONT UNE DURÉE LIMITÉE, À L'INSTAR DE LA PRÉSENTE GARANTIE. QUIRKY DÉCLINE TOUTE RESPONSABILITÉ EN CAS DE DOMMAGES ACCIDENTELS, SPÉCIAUX, DIRECTS, INDIRECTS OU CONSÉCUTIFS TELS QUE, SANS TOUTEFOIS QUE CETTE LISTE SOIT EXHAUSTIVE, LA PERTE D'ACTIVITÉ OU DE PROFITS DUS À LA VENTE OU À L'UTILISATION DE N'IMPORTE QUEL PRODUIT QUIRKY, ET CE, MÊME SI L'ÉVENTUALITÉ DE TELS DÉGÂTS AVAIT ÉTÉ SIGNALÉE.

Certains pays n'autorisent pas l'exclusion ou la limitation des garanties implicites ni sur les dégâts accidentels, consécutifs ou autres. Les restrictions ci-avant pourraient ne pas vous concerner.

COPYRIGHT

Copyright 2013 Quirky Incorporated

Aucune partie de ce manuel ne peut être reproduite ou modifiée sans l'accord écrit préalable de Quirky Incorporated.

Quirky Incorporated décline toute responsabilité en cas d'erreurs opérationnelles ou techniques, voire d'omissions dans ce manuel.

Quirky et Nimbus sont des marques commerciales de Quirky Incorporated.

Wi-Fi® est une marque déposée de Wi-Fi Alliance.

COMMENT OBTENIR UNE REPARATION

Besoin d'aide ? Nous sommes disponibles

Du lundi au vendredi de
9 h à 21 h (GMT-5)

Le week-end de
12 h à 18 h (GMT-5)

E-mail : questions@france.quirky.com

Téléphone : 1-866-5QUIRKY

